


THE LHC CENTRAL TIMING HARDWARE IMPLEMENTATION

P. ALVAREZ, J. LEWIS, J. SERRANO

CERN, Geneva, Switzerland

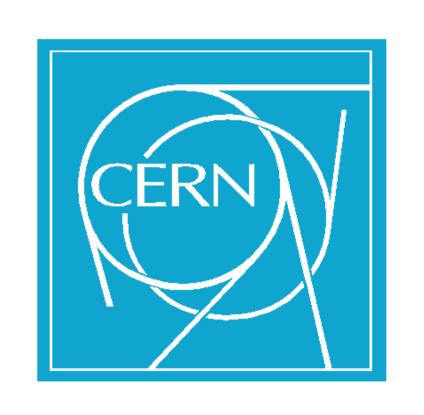


Abstract

The LHC central timing requirements are very different from those of the injector chain, not only is machine safety and reliability critical, there are other important differences that have forced a new approach. Unlike the injector chain, the LHC processes can not be usefully broken up into basic time periods and cycles, rather they are independent, asynchronous, and of arbitrary duration. This paper presents the MTT, the new multitasking event generation hardware we developed to control the LHC machine processes.

THE TIMING SIGNAL

LHC GENERAL MACHINE TIMING SYSTEM OVERVIEW

A Symmetricom Xli Time and frequency system disciplined by a GPS input provides two basic clocks, namely the Pulse Per Second PPS and the 10MHz, all other clocks are derived from these throughout the CERN central timing. These clocks are fed to synchronization modules in the LHC master timing generator and its hot standby, where the PPS is delayed by (1s-100us) to effectively produce a PPS advanced by 100us. The synchronization module also multiplies the 10MHz via a Phase Locked Loop PLL to produce a 40.00MHz clock, which is used by the MTT to Manchester encode the event stream at 500Kbits per second, to produce eight 32bit event frames per millisecond. The MTT encodes and trans-

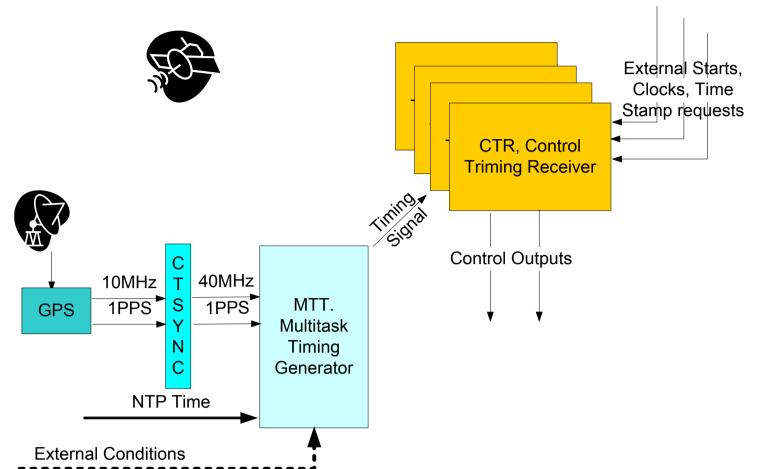

mits the UTC time at the advanced PPS tick. The 100us offset together with the transmission delay will be compensated for at the CTR timing receivers [5] to realign the output PPS tick with UTC. The CTR timing receivers recover the encoding 40MHz and use this recovered clock to ensure the local PPS is within 25ns of the original Xli PPS.

The Timing Generator builds and broadcasts a 1MHz Manchester encoded timing signal containing UTC frames, millisecond frames and CPU send requests. Frames always contain 4 bytes of data sent in 125us slots. Millisecond frames are always sent periodically, whereas UTC frames are low priority and can be discarded. CPU send requests are stored in a 256 frames FIFO. Alarms are raised if the CPU send request is not treated in the corresponding millisecond, which can be allowed in normal operation, or if the FIFO is full.

Each 32-bit timing frame is broken up into two 16-bit parts; a header and a payload. The header identifies the kind of frame it is, for example a UTC time frame, a telegram frame, or a machine event frame. For some header types, the header contains a

The MTT task register Map consist of 256 locations:

• 218 Global registers visible by every task.


code; in particular machine and telegram events contain an 8-bit code. For telegram frames the code denotes which telegram parameter the frame represents, while event codes denote which event it is, for example start-ramp or post-mortem.

The payload carries specific information that depends on the header. The two UTC frames carry the 32-bit UTC time, and in the LHC, the machine event payloads vary according to the event code. For example the LHC beam intensity event carries the intensity per bunch encoded in units of 10¹⁰ protons; while the machine mode event carries the mode enumeration in its payload.

• 32 Task registers. Task register #0 is used as an index in relative move instructions.

TSYNC Time from sync, Read/Write. Milliseconds since last sync arrived.

MSMR: Millisecond modulo Read/Write. Sent as payload in the millisecond frame.

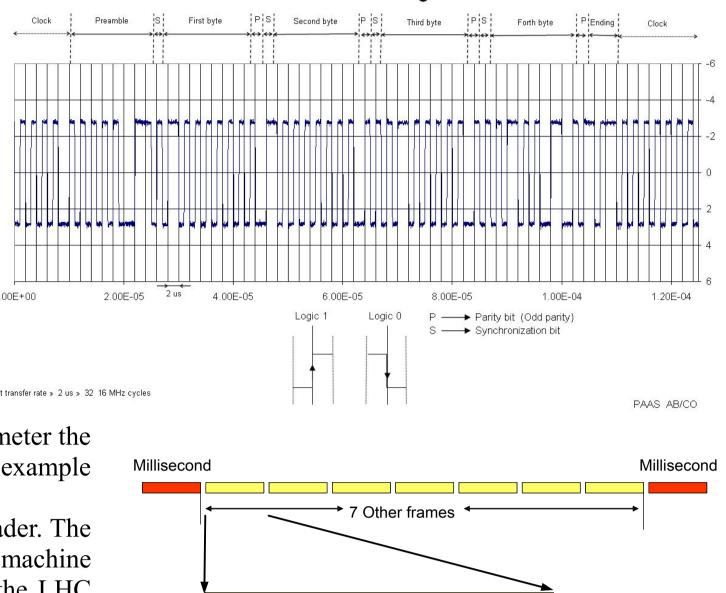

PAYLOAD

A T CODE

General Machine Timing Frame

FPGA (Spartan2 600E) UTC SERIALIZER CPU

MTT ARCHITECTURE

The MTT has been developed having in mind the new LHC sequencing requirements. In LHC, processes are independent from each other and do not adapt to a periodic structure as in the injector chain [1]. The MTT, implemented in the same hardware as the previous Timing Master (CTG), contains a CPU that runs up to 16 tasks in a round robin scheme. Tasks can be executed, loaded and stopped independently from each other in a deterministic way. Timing events are sent by writing to a special register of the Tasks Register map. The MTT CPU was inspired by the TMS9900, which maps all of its registers to external memory. A single workspace register (WP) points to a set of 16 registers. This provides a simple mechanism for context switching, where the store of 16 registers

becomes equivalent to storing and updating the WP. In the MTT all the local registers and memory are mapped to internal RAM. A scheduler updates the WP every instruction cycle in a round robin scheme, resulting in a continuous and deterministic parallel execution of every task.

Scheduler. Every time a task is enabled or stopped the scheduler builds an execution table. Tasks are executed from lowest task number to highest. The scheduler provides the executed task number and the task enable bit, which are

Program Memory. The MTT can store 4K instructions in internal memory. The program memory address read by a task is calculated by adding to the task's PC a second register called PC offset. Thus a task can be reallocated dy-Status Block. It keeps flags such as Illegal opcode, illegal register, illegal value, running, waiting or halted. It also stores the milestone for the Wait Relative. The status block is read at the same moment as the Program Memory and up-

VMEP2: External events read only, clear on read.

INSTRUCTION SET

• 6 IO registers:

TASKS REGISTER MAP

A significant effort has been put in designing a generic instruction set. All logical, arithmetical and wait instructions can use Sourcel as a literal or a register address. Sending an event on the timing cable is equivalent to writing to the EVOUT register. Thus adding a new IO device, such as an additional serializer, just requires a connection to the Memory Map.

EVOUT: Timing frame out Read/Write. It writes into the frame serializer FIFO and reads the frame being sent on the cable.

MSFR: Millisecond free running counter, Read only. Used to wait for a relative number of milliseconds.

SYNC: Sync free running counter Read only. Used to wait for a relative number of sync periods.

In Wait Equal the task waits until the two sources are equal; in Wait Or it waits until (Source1 and Source2) $\neq 0$; finally Wait Relative is used to wait on a free running counter. It adds Source1 to Source2 and stores it into a reference register (milestone). The wait state ends when Source2 = milestone. This scheme allows the 16 tasks to have independent programmable delays using a single counter and internal RAM.

VME access is D32A24. Registers implemented in internal RAM, such as Program Memory, TCB table, local, global registers and

task's status can be read or written at any time by the VME interface. This is achieved by time multiplexing the access of the MTT

Sched Task # Task# Operand Fetch Regs Dest Add Dest Data WrEn Execution Status Task#

CPU BLOCK DIAGRAM

pipelined to the rest of CPU blocks.

namically in memory without need to stop it. dated by the Execution Unit.

Operand Fetch Unit. The Operand Fetch unit decodes the operation code and fetches the corre-

DEVICE UTILIZATION

VME ACCESS

The MTT has been fully developed in VHDL. It was fitted in the same PCB used by the previous timing master, the CTG. The target FPGA is a Spartan2E 600. The design makes extensive use of internal RAM, either distributed RAM (i.e. task's status, task's milestones) or block RAM (i.e. program memory, task's registers). The MTT maximum frequency is 50MHz and runs at 40MHz.

CPU and the VME interface to the corresponding Block RAM.

Device Utilization Summary (xc2s600e-6fg456)							
Logic Utilization	Used	Avail- able	%				
Number of Slice Flip Flops	2,268	13,824	16%				
Number of 4 input LUTs	3,804	13,824	27%				
Logic Distribution							
Number of occupied Slices	2,673	6,912	38%				
Number of Slices containing only related logic	2,673	2,673	100%				
Number of Slices containing unrelated logic	0	2,673	0%				
Total Number of 4 input LUTs	4,294	13,824	31%				
Number used as logic	3,804						
Number used as a route-thru	276						
Number used for Dual Port RAMs	212						
Number used as Shift registers	2						
Number of bonded IOBs	154	325	47%				
Number of Block RAMs	72	72	100%				
Number of GCLKs	2	4	50%				
Number of GCLKIOBs	3	4	75%				
Total equivalent gate count for design	1,239,6 14						


jmp cont

HALT	Stop program	AtNothing	AtNothing	AtNothing
NOOP	No operation	AtNothing	AtNothing	AtNothing
INT	Interrupt[116]	AtLiteral	AtNothing	AtNothing
WEQV	Wait value equal	AtLiteral	AtRegister	AtNothing
WRLV	Wait value relative	AtLiteral	AtRegister	AtNothing
WORV	Wait value bit mask	AtLiteral	AtRegister	AtNothing
WEQR	Wait register equal	AtRegister	AtRegister	AtNothing
WRLR	Wait register relative	AtRegister	AtRegister	AtNothing
WORR	Wait register bit mask	AtRegister	AtRegister	AtNothing
MOVV	Load register	AtLiteral	AtNothing	AtRegister
MOVR	Move register	AtRegister	AtNothing	AtRegister
MOVIR	Move Index register	AtNothing	AtNothing	AtRegister
MOVRI	Move register Index	AtRegister	AtNothing	AtNothing
ADDR	Add register	AtRegister	AtRegister	AtRegister
SUBR	Subtract register	AtRegister	AtRegister	AtRegister
LORR	Or register	AtRegister	AtRegister	AtRegister
ANDR	And register	AtRegister	AtRegister	AtRegister
XORR	ExclusiveOr register	AtRegister	AtRegister	AtRegister
LSR	LeftShift register	AtRegister	AtRegister	AtRegister
RSR	RightShift register	AtRegister	AtRegister	AtRegister
ADDV	Add value	AtLiteral	AtRegister	AtRegister
SUBV LORV	Subtract value	AtLiteral AtLiteral	AtRegister AtRegister	AtRegister AtRegister
ANDV	Or value And value	AtLiteral	AtRegister AtRegister	AtRegister AtRegister
XORV	ExclusiveOr value	AtLiteral	AtRegister	AtRegister
LSV	LeftShift value	AtLiteral	AtRegister	AtRegister
RSV	RightShift value	AtLiteral	AtRegister	AtRegister
JMP	Jump	AtAddress	AtNothing	AtNothing
BEQ	Branch Equal	AtAddress	AtNothing	AtNothing
BNE	Branch NotEqual	AtAddress	AtNothing	AtNothing
BLT	Branch LessThan	AtAddress	AtNothing	AtNothing
BGT	Branch GreaterThan	AtAddress	AtNothing	AtNothing
	Branch LessThan-		J	<u> </u>
BLE	Equal	AtAddress	AtNothing	AtNothing
	Branch GreaterThan-			
BGE	Equal	AtAddress	AtNothing	AtNothing
BCR	Branch Carry	AtAddress	AtNothing	AtNothing

sponding registers.


CPU

Execution Unit. The Execution Unit calculates the result data, the new PC and status register. Register Block. The register block stores local, global and special registers. The access is transparent to the Operand Fetch Unit.

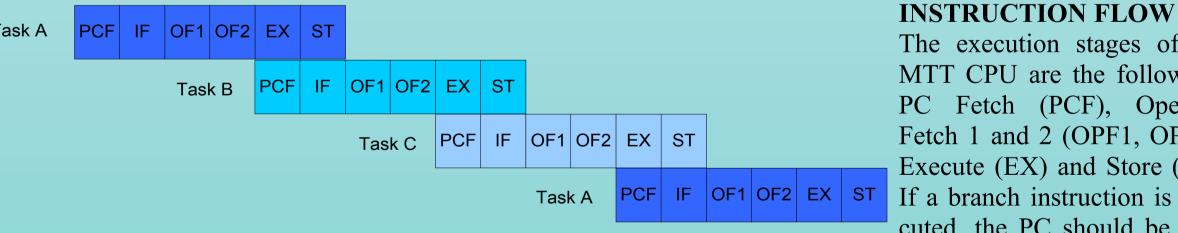

The execution stages of the MTT CPU are the following: PC Fetch (PCF), Operand Fetch 1 and 2 (OPF1, OPF2), Execute (EX) and Store (ST). If a branch instruction is exe-

cuted, the PC should be read in PCF before it has been stored in ST; otherwise the task will jump to an incorrect location. This is avoided by inserting void tasks if necessary.

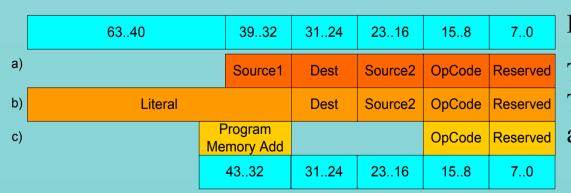

INSTRUCTION FORMAT

Source 1 Dest Source 2 OpCode Reserved The instruction format is triadic with a fixed length of 64 bits. Dest Source OpCode Reserved There are three possible formats: Register, Register to Register OpCode Reserved and branch instructions.


THE MTT IN PRACTICE

Event Table Processing

An event table is a list of entries, each of which contains the name of the event to be broadcasted over the LHC timing cable, the relative time to wait before sending it, and its payload. These tables model LHC machine processes and are controlled from the LHC Software Architecture LSA timing service. The event table is sent from LSA to the LHC central timing gateway as a byte stream. On arrival the

event table compiler builds an ASCII file suitable for input to the MTT assembler that will become the event task. The compiler first translates each entry in the table into wait and move instructions. The resulting block of instructions is then included into an event table task template to become a full event task suitable for assembly. The template contains code that manages the task synchronisation and its run count. The resulting task is assembled into position independent object code. The task loader then places it in memory, initialises its control block and runs it. LSA must now specify a synchronisation event and run count to start producing event frames from it.

The length of an event table can vary form only one event entry to thousands, and event tables are loaded and unloaded under LSA control. The task loader must manage MTT program memory so that each task has the memory it needs. The task PC offset register permits the task loader to pack fragmented memory containing running tasks into contiguous memory. This can be achieved by copying a task from one address to another unused portion of memory and changing its offset register so that it executes at the new location without being disturbed.

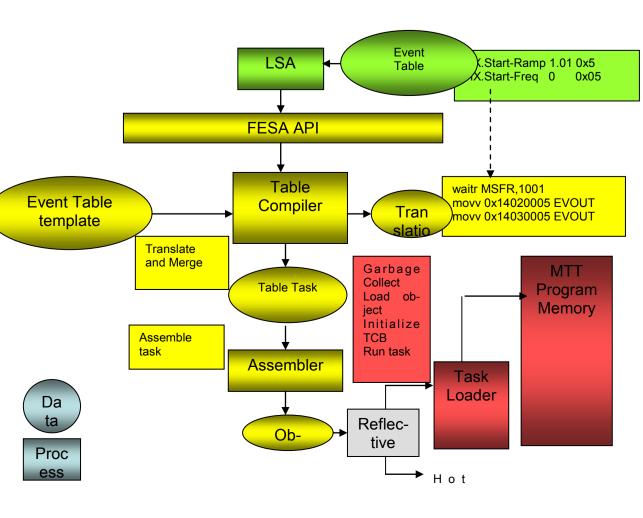

% Start program and interrupt survey task % Say we are running movv TskStsRUNNING LRegTASK STATUS movv ConsNOT SET LRegParRUN COUNT % Run forever % Notify survey we are running % Wait for the VME P2 bits and send out events accordingly worv ConsVMEP2 BITS VMEP2 % Wait for VME P2 bits movr VMEP2 RegVmeP2 % Copy reg and clear bits tdmp1: % Test for dump ring 1 andv ConsHX DMPD1 BIT RegVmeP2 LRegTEMP % Test dump 1 bit % Go check for dump 2 bit EVOUT ConsHX DMPD1 % Send dump 1 movv ConsHX ENBPM1 % Re-enable after a dump % Test for dump ring 2 ♥andv ConsHX DMPD2 BIT RegVmeP2 LRegTEMP % Test dump 2 bit % Go injection warning bit % Send dump 2 movv ConsHX DMPD2 movv ConsHX ENBPM2 % Re-enable after a dump % Test for LHC injection ¥andv ConsHIX FW BIT RegVmeP2 LRegTEMP % Test inject bit % Go check for PM ring 1 ConsHIX FW % Send injection forewarning tpm1: % Test for post mortem bit 1 ➤andv ConsHX PM1 BIT RegVmeP2 LRegTEMP % Test PM ring 1 bit % Go check for PM ring 2 tpm2 movv ConsHX PM1 EVOUT % Send PM-1 trigger % Test for post mortem bit 2 andv ConsHX PM2 BIT RegVmeP2 LRegTEMP % Test PM ring 2 bit % Go check for PM ring 2 ConsHX PM1 EVOUT % Send PM-1 trigger (not PM-2)

% Go wait for next P2 interrupt

MTT EXTERNAL EVENT TASK

External events such us beam-dump requests, injection requests and post mortem analysis are fed into the MTT via the VME P2 User IO register. The register VMEP2 stores any External Event transition. A task waits on this register and clears it at the same time it copies it into a work register (RegVmeP2). The task verifies the active bits and broadcasts the necessary Event Frames by writing to the Event Out register (*EVOUT*).